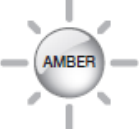



6. Advanced settings guide

Carry out only if settings need to be changed

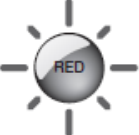
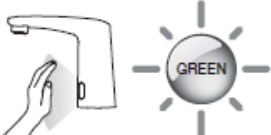

- 1 Disconnect power, wait for 5 seconds and reconnect.

- 2 When **flashing amber**  Place hand 4-6cm from sensor until **constant green**. Then remove hand. 

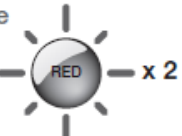
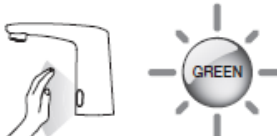
- 3 You are now in configuration mode

If a hand is not placed over the sensor, it will go into normal operation mode.

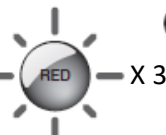
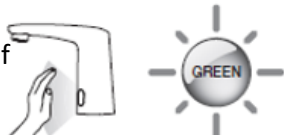
Sensing range adjustment

- A Wait for **single red flashing** LED to enter sensing range mode 
- B Briefly place your hand in front of the sensor until the **green LED flashes slowly**. Range configuration mode will then be ready 
- C Move your hand to the distance from the sensor you would like to set as maximum range. Wait 8 seconds until **constant green** shows  Sensor distance is now set

Run-on time adjustment

- A Wait for **double red flashing** LED to enter run-on time  x 2
- B During **double red flashing** briefly place your hand in front of the sensor, water will start running while a **green flashing** will be seen. **HOLD HAND STEADY** 
- C When the water has run for the desired run-on time, move your hand out of the line of sight of the sensor. The water will cease and the run-on time will be set.

12hr Hygiene rinse activation

- A Wait for **triple Red flashing** LED to enter hygiene rinse activation.  x 3
- B During **triple red flashing** place your hand in front of the sensor. Single green flash = on, Double green flash = off. To change state briefly move your hand away and re-place in front of the sensor again. 
- C When selection has been made move your hand out of the line of sight of the sensor. The LED will change to steady green and the hygiene activation will be set.

- 4 After configuration the unit will **flash amber** giving opportunity to re-enter configuration mode

